2. Disassembly and Reassembly

2-1 Front Cabinet

1. Remove the battery of A
2. Remove 7 screws of ! of its rear part
3. Remove Front Cabinet of B

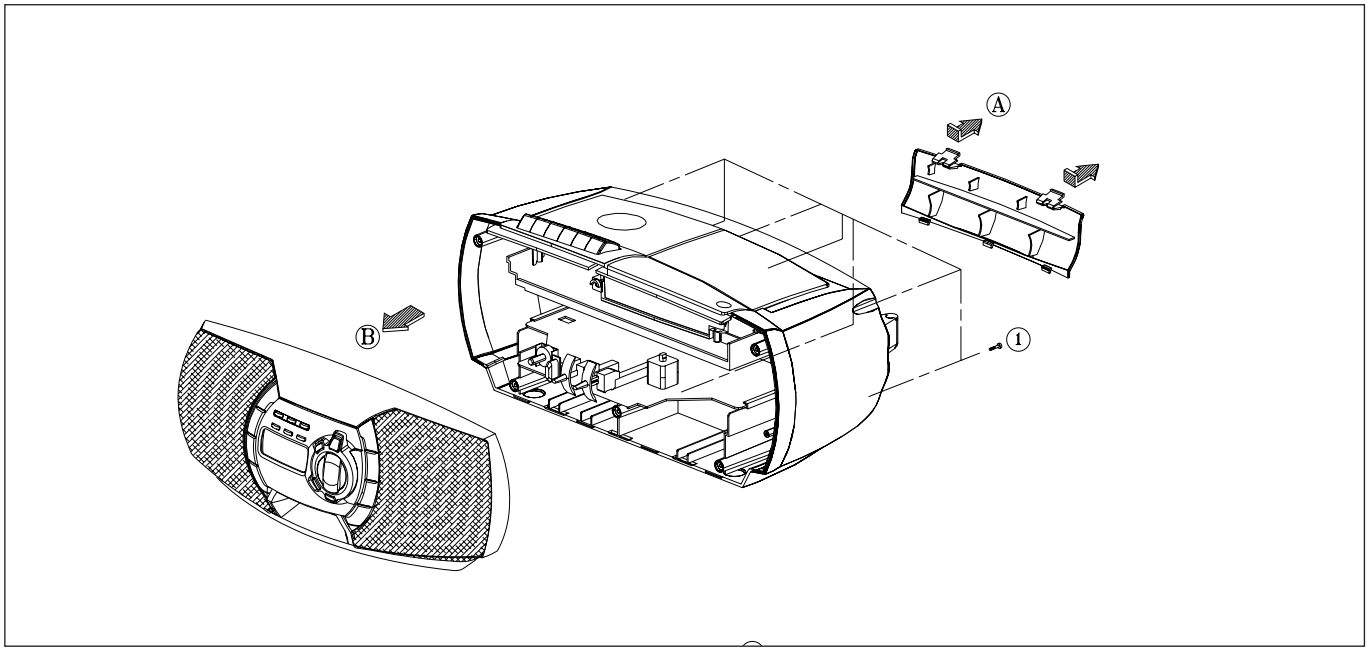

Fig 2-1

2-2 Top Cabinet

1. Lift handhold to topward, and remove 3 screws of @ of its top part
2. Press the CD COVER and DECK COVER, and remove 3 screws of # of its top part
3. Remove Top Cabinet of C

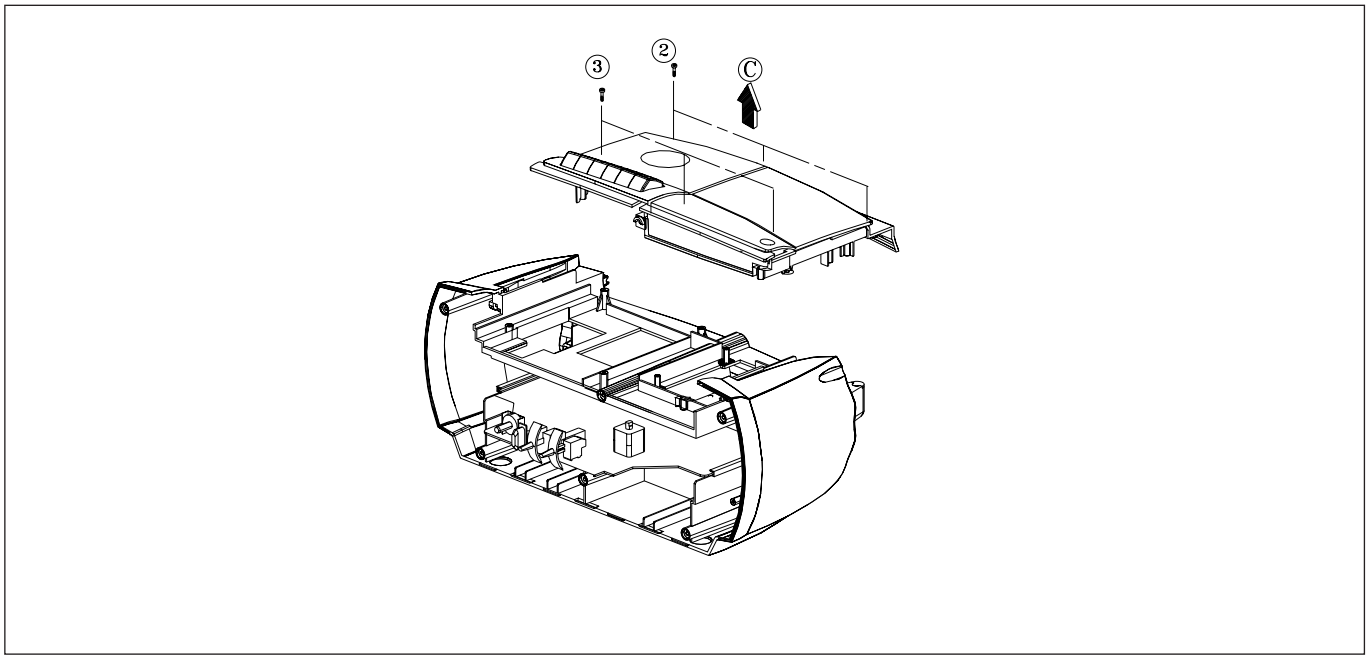

Fig 2-2